



The University of Michigan School of Public Health

(734) 763-4192
(734) 763-9851 (FAX)


Classroom Services
M3065 SPH II

Operating the Sony DVD/Video Cassette Player

- Begin by switching on the LCD projector and selecting the "Video" source (see the instruction sheet for the projector).
- Switch on the DVD/Video cassette player using the power switch on the front panel of the player or the remote control (note that the slide switch next to the power button should be set to "DVD-VIDEO"):

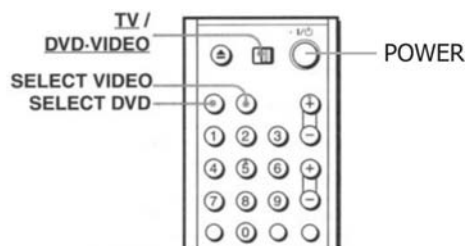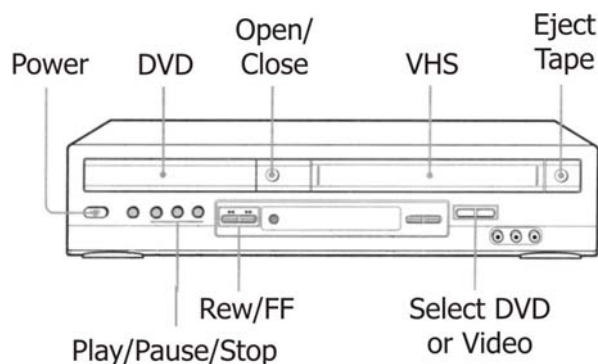

- Insert your DVD or videotape into the appropriate compartment of the player and then use the buttons on the player or the remote control to select the corresponding source (see illustrations above).
- Use the buttons on the front panel or on the remote control (see illustration on the reverse of this sheet) to begin playing your DVD or videotape.

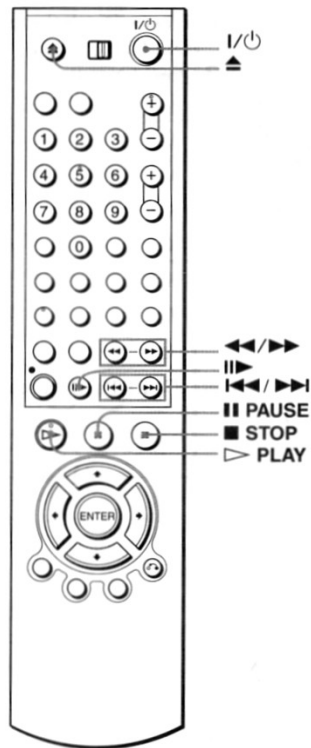

- Adjust playback volume using the controls available to you through the instructor's station (see the associated instruction sheet).