


The University of Michigan School of Public Health

(734) 763-4192
(734) 763-9851 (FAX)


Classroom Services
M3065 SPH II

Operating Classroom Equipment from the Instructor's Station (rooms with Epson 7800p LCD Projector)

- **Please shut off the video projector when not in use; replacement lamps cost \$400 (no exaggeration).**
- If the station is disconnected from a power source, it will be necessary to reset the switches on the plug strips located on the rear wall of both the left- and right-hand cabinets in the base of the station.
- Use the hand-held remote control to operate the video projector (suspended from the ceiling):

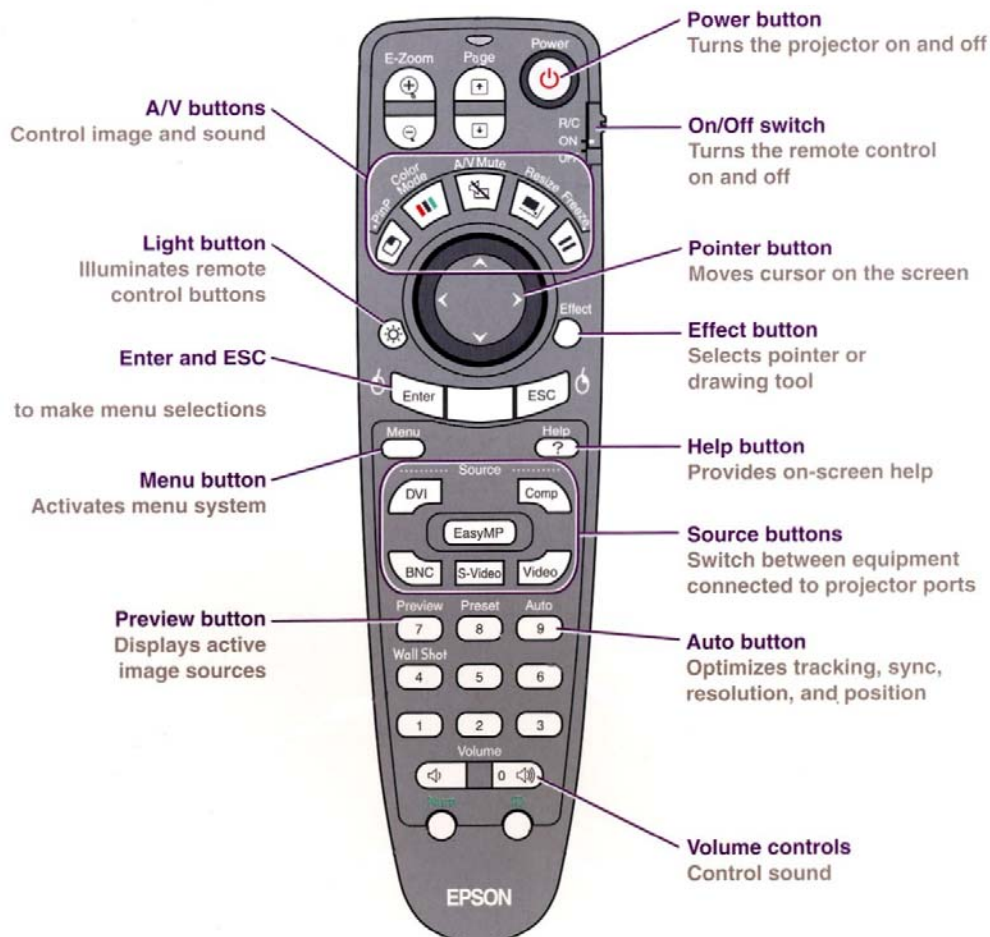

- Make sure that the remote control on/off switch (located on the right side of the device) is in the up (on) position. If the unit fails to operate, it may need new batteries (available by notifying us at sph.av@umich.edu or 763-4192)
- While pointing the remote control at the projector, press the Power button; after 40-45 seconds, the lamp will reach full intensity.
- The projector is preconfigured to look for a signal from the computer installed in the instructor's station. To show a videotape, press the "Video" button on the remote control (see illustration above); use the volume control to adjust the level as needed. The video player/recorder is located in the cabinet on the right side of the instructor's station.
- To display the output of a laptop computer, connect a video cable from the connector on the front of the instructor's station (illustrated below) to the video port on the rear of the laptop. Press the "BNC" button on the projector remote control.

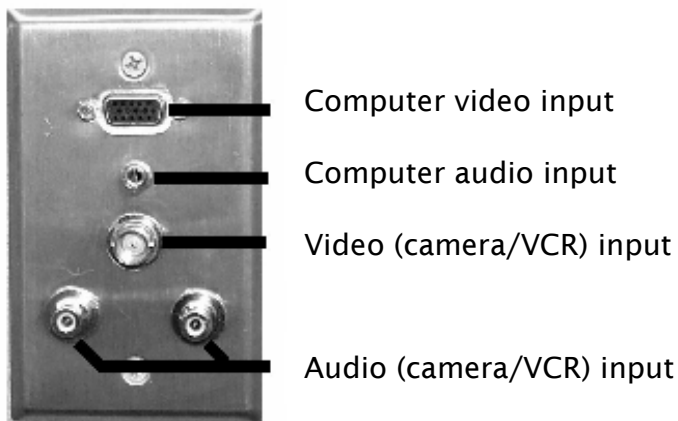

- If the projector displays a "no signal" message, it may be necessary to press a key combination on the laptop keyboard (often Fn-F5) to enable the external video port. This is usually a three-way toggle—internal display only, external display only, or both.
- It is sometimes desirable to suppress an image from appearing on the projection screen. To do so without shutting off the projector, press the "A/V Mute" button on the remote control (see illustration below). Press the button a second time to restore the image.

